

Learn about more GoPro products at: gopro.com

120-000012-0A Please Recycle.

3D HERO SYSTEM

USER MANUAL + WARRANTY INFO

GoPro
Be a HERO.

FIRMWARE UPDATE

The 3D HERO System requires two 1080p HD HERO cameras. You may need to download and install new firmware on both cameras before using the 3D HERO System. To determine if you need the firmware update on both cameras, turn your cameras on and enter the settings menu. If the "LCD/LCD" menu option is listed within the SET menu, your cameras are already up to date and you do not need to update your firmware.

If the "LCD/LCD" symbol does NOT appear, then you will need to download and install the latest firmware for your cameras at gopro.com/firmware.


REQUIRED FREE 3D EDITING SOFTWARE: GOPRO CINEFORM STUDIO™

Your 3D HERO System allows you to combine two 1080p HD HERO cameras with a 3D HERO sync cable to record synchronized videos and photos. The cameras record video and photos much like your eyes see the world—with right and left lenses. While recording, each camera independently saves 2D video or photos to the respective SD card. In order to convert the saved 2D files into a single 3D file, you will need to download a FREE copy of GoPro CineForm Studio from gopro.com/3D.

GoPro CineForm Studio makes creating 3D videos and photos easy. Simply import the video or photo files you want to convert to 3D, click a button and the software automatically converts your paired 2D files into a single, viewable 3D file. Using the red/blue (anaglyph) glasses included with the 3D HERO System, you can watch your 3D videos and photos on your computer, online at video sharing sites like YouTube that support 3D videos, or on your 3D TV at home using active or passive shutter glasses depending on your 3D TV.

To download and install your free copy of GoPro CineForm Studio, visit gopro.com/3D.

3D HERO SYSTEM FEATURES

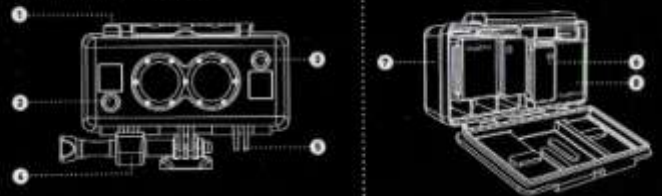

1. Master Shutter Button Controls both Cameras
2. Right Camera Power Button
3. Left Camera Power Button
4. Center Mount Adapter
5. Mounting Fingers
6. 3D HERO Sync Cable
7. Waterproof Housing
8. Requires two 1080p HD HERO Cameras (not included)

ASSEMBLING TWO HD HERO 3D SYSTEM

COMBINING TWO CAMERAS FOR 3D VIDEO AND PHOTO CAPTURE

NOTE: The 3D HERO System requires two 1080p HD HERO cameras. Each camera requires a fully charged battery and SD card with sufficient memory for recording (GoPro recommends Class 4 or faster SD cards). Each camera's setting (eg. resolution, exposure, photo mode, video format (MPL & H264) must match for 3D synchronization to work.



To combine cameras in 3D HERO System waterproof housing:

1. Open back door to the 3D housing.
2. Insert "right" camera right side up into housing.
3. Insert "left" camera upside side down into housing.
4. Attach the 3D HERO Sync Cable into the HERO BUS Port on both cameras. The side that says "R" on the sync cable attaches to the right camera while side that says "L" on the sync cable attaches to the left camera.

Note: Upon insertion of the sync cable, the right camera will automatically set itself to be in UP mode and the left camera will automatically set itself to be in UPd mode. This configuration is required for capturing synchronized 3D videos and photos. If 3D synchronization is not desired, you can manually change each camera's settings to be in a different UP/UPd mode, different resolution, etc. but the cameras will only record in a synchronized manner allowing for 3D if BOTH cameras are set to shoot the same resolution and frame rate.

5. Make sure the 3D Sync Cable is fully inserted and is flush against the back of the cameras. Close waterproof housing.

If settings are changed and you wish to return each camera to its default 3D setting, simply turn each camera OFF and unplug the sync cable. Then plug the sync cable back in to both cameras and turn each camera ON with sync cable attached. This will reset the right camera to UP mode (right side up) and the left camera to UPd mode (upside down), allowing for synchronized 3D video and photo capture.

REMOVING 3D SYNC CABLE FROM CAMERAS

To remove the sync cable from the HD HERO BUS Port, grasp each 3D sync port connector firmly and remove by lifting device evenly away from the HERO BUS Port. Do NOT pull on cable connecting the left and right HERO port connectors.

USING THE 3D HERO SYSTEM

IMPORTANT: To capture 3D video and photos, both cameras must be set to identical resolution and frame rate settings.

To begin recording video or photos:

1. Power on both cameras.
2. Verify that SD cards are present in both cameras, that batteries are charged and that both cameras are set to the same resolution and frame rate. Right camera will automatically set itself to UP and left camera will automatically set itself to UPd. This is necessary for capturing synchronized 3D video and photos.
3. Press shutter button on top of 3D HERO System Housing to initiate synchronized 3D video or photo capture.

Additional Notes:

- Blinking front LCD screen and red LED record lights may or may not blink in sync. This is OK and has no effect on whether or not each camera is in sync with the other.
- Should the battery die or SD card become full on either camera, both cameras will save the files and stop recording.
- Always use brand name SD cards with a Class 4 rating or higher.
- The 3D HERO System can also capture 3D photos in time lapse mode every 2, 5, 10, 30, or 60 seconds. Photo every 1 second mode is not possible when capturing 3D photos. To capture 3D photos in 3D time lapse mode, change the mode on both cameras to Photo Every "X" mode and press the shutter button to begin recording.

MOUNTING CONFIGURATIONS

IMPORTANT: It is recommended to use dual quick-release buckles for mounting the 3D HERO System whenever possible for maximum stability. Using a single center mounted quick-release buckle is only recommended for chest, helmet, suction cup, and other body worn applications where high vibration or impact are less likely. Use of a single center quick-release buckle in high vibration or high impact scenarios can result in less stable video compared to using two quick-release buckles.



More stable video with dual quick-release buckles



Less stable video with single quick-release buckle

CURVED AND PLAT SURFACE MOUNTING



The extension arms and quick-release buckles can be used in a number of different orientations depending on what type of surface you are attaching the 3D HERO System to. For example, attach included extension arms to the quick-release buckles in order to achieve proper orientation when attaching the waterproof housing to curved surfaces.

Note: When removing the quick-release buckles from the adhesive mounts, push both quick-release buckles out evenly to avoid jamming the buckles.

FRONT HELMET AND CHEST MOUNTING



Front Helmet Mount: Attach the Front Helmet Mount to the center fingers with the center mount adapter and long thumb screw.

Chest Mount: Attach the curved quick-release buckle (and straight arms if necessary for proper angle adjustment) to the center fingers on the waterproof housing with the center mount adapter and long thumb screw.

WARNING: Single center mount configuration is not recommended for high impact or high vibration use.

VIDEO RECORDING TIPS

• For best results, keep your subject to at least 3 feet away from camera when shooting in photo mode, 720p, and 560p resolutions. When shooting in 1080p, because of its less wide angle perspective, it's best to keep your subject at least 5 feet away from the camera. Failure to do so will result in an inability to properly align the two video files for 3D and will cause your eyes to strain when viewing the subject on screen.

WARNING: If images are shot closer than the recommended distances, the resulting 3D image will cause eye strain when viewing during playback.

• For best 3D results, the right camera must be in UP and the left camera must be in UPd recording modes. For convenience, the sync cable automatically adjusts each camera into the ideal UP / UPd mode each time you plug the sync cable into each camera.

• Both lenses should be cleaned prior to and during use. Discrepancies in images between cameras due to dust particles, water drops, etc. will cause eye strain when viewing in 3D.

• The 3D HERO System can record different video resolutions simultaneously, but it will not be possible to create 3D video files from the resulting video files as the resolutions will not match. Additionally, synchronization will not occur when the resolutions of each camera do not match.

• To prevent fogging when using the waterproof back door, use GoPro's anti-fog inserts with your 3D HERO System housing.

TRANSFERRING VIDEO AND PHOTOS TO YOUR COMPUTER

Plug the camera into your computer with the included USB cable, turn on the camera, and locate the Removable Disk (SD Card) icon. Once the icon is located:

1. Double click the "Removable Disk" icon.
2. Double click the "DCIM" folder icon.
3. Image files captured with the right camera will be stored in a folder named 1000_3D_R.
4. Image files captured with the left camera will be stored in a folder named 1000_3D_L.
5. Any file created during 3D sync recording will start with 3D_L0001 or 3D_R0001.

CREATING 3D VIDEO AND PHOTOS WITH GOPRO CINEFORM STUDIO

To convert 3D video and photo files into 3D files, you will need to use GoPro's CineForm Studio software. GoPro CineForm Studio and associated instructions are available as a FREE download from gopro.com/3D.

IMPORTANT SAFETY + HANDLING INFORMATION

WARNINGS

Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage to the 3D HERO System or other property.

Improper alignment of your 3D images or misuse of the GoPro CineForm Studio software while viewing with 3D glasses may cause eye strain or headaches.

HANDLING

The 3D HERO System contains sensitive components. Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects into the camera or 3D sync cable. Do not use the 3D HERO System if it has been damaged.

AVOIDING WATER AND WET ENVIRONMENTS WHEN NOT IN WATER HOUSING

Do not use the 3D sync cable in rain, near wash basins, or in other wet locations when cameras are not mounted in the water housing. Do not spill any food or liquid on the 3D sync cable. If the 3D sync cable gets wet, unplug from camera and allow it to dry thoroughly before using again. Do not attempt to dry the 3D sync cable with an external heat source, such as a microwave oven or hair dryer. Damage to the 3D sync cable caused by contact with liquid is not covered under warranty.

USING CONNECTORS AND PORTS

Never force a connector into a port. Check for obstructions in the port. Make sure that the connector matches the port and that you have positioned the connector correctly in relation to the port.

WARRANTY

This product is guaranteed against manufacturing defects for one (1) year from the original date of purchase. GoPro's sole obligation in the event of such defects during this period is to repair or replace the defective part or product with a comparable part or product at GoPro's sole discretion. Except for such replacement, the sale, or other handling of this product is without warranty, condition or other liability even though the defect or loss is caused by negligence or other fault.


Damage resulting from use, accident, or normal wear and tear is not covered by this or any warranty. GoPro assumes no liability for any accidents, injury, death, loss, or other claim related to or resulting from the use of this product. In no event shall GoPro be liable for incidental or consequential damages relating to or resulting from the use of this product or any of its parts. Because of possible user resulting error, this product is not warranted against waterhousing leakage or any resulting damage.

Visit gopro.com for more information.

For instructions in other languages visit: gopro.com

Compatible With All GoPro Mounting Accessories

Compatible avec tous les accessoires de montage GoPro

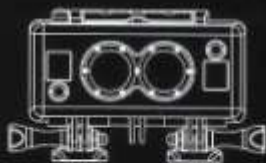

Flat Surface Mount
Montage sur surface plane



Curved Surface Mount
Montage sur surface incurvée



Single Center Mount attaches to helmet, body, suction cup and more
Montage central simple pour port sur le corps ou un casque, ou utilisation avec une ventouse, entre autres



(Actual 3D HERO SYSTEM Images above/Images du SYSTÈME 3D HERO réelles ci-dessus)

GoPro
Be a HERO.

System Requirements:

May require a FREE downloadable firmware update for your HD HERO® cameras, available at gopro.com/firmware. FREE downloadable 3D editing software available at: gopro.com/3D

Configurations Minimales:

Peut exiger une mise à jour GRATUITE du micrologiciel pour vos caméras HD HERO, téléchargeable à l'adresse : gopro.com/firmware. Logiciel d'édition 3D téléchargeable gratuitement à: gopro.com/3D

Record HD Video + Photos In 3D


- Allows you to combine 2 HD HERO[®] cameras* to record 3D video + photos while simultaneously recording in 2D.
- Included GoPro CineForm Studio 3D editing software makes creating 3D movies + photos easy. Download for FREE at gopro.com/3D

Enregistrez des vidéos et photos HD en 3D

- Vous permet de combiner deux caméras* HD HERO pour enregistrer des photos et vidéos en 3D tout en enregistrant simultanément en 2D.
- Le logiciel d'édition 3D GoPro Cineform Studio permet de créer facilement des vidéos et des photos en 3D. Télécharger gratuitement à gopro.com/3D

3D Waterproof Housing
Rated to 180'/60m Deep
(Boîtier 3D étanche jusqu'à
180'/60 m de profondeur)

**Mounting System is
Compatible with all
GoPro Accessories**
Le système de montage est
compatible avec tous les
accessoires GoPro

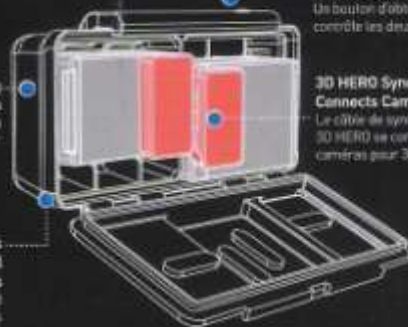

**One Shutter Button
Controls Both Cameras**
Un bouton d'obturateur
contrôle les deux caméras

**3D HERO Sync Cable
Connects Cameras for 3D**
Le câble de synchronisation
3D HERO se connecte aux
caméras pour 3D

120 002002 04



* Requires two 1080p HD HERO cameras. Cameras not included./Exige deux caméras HD HERO 1080p. Caméras non comprises.

GoPro, HERO, and their respective logos are trademarks of Woodman Labs, Inc. in the United States and other countries. Copyright © 2011. All Rights Reserved. Woodman Labs, Inc.

Included Items:

- 3D Waterproof Housing
- 3D Standard + Skeleton Doors
- 3D HERO Sync Cable
- 3D Glasses (3 pairs)
- Helmet Front Mount
- 2 Flat + 2 Curved Adhesive Mounts
- Assorted Mounting Hardware

Articles Compris:

- Boîtier 3D étanche
- Portes standard + squelette 3D
- Câble de synchronisation 3D HERO
- Lunettes 3D (3 paires)
- Support de montage à l'avant du casque
- 2 supports de montage adhésifs plats et 2 incurvés
- Jeu de pièces de montage

INCLUDED 3D SOFTWARE: GoPro CineForm Studio



**Makes creating
3D movies +
photos easy.**

Pour créer
facilement des
photos et des
vidéos en 3D.

Download for FREE at gopro.com/3D
Télécharger gratuitement à gopro.com/3D